


OUTERIMPACT

SMITH & WESSON® M&P- M.R.A (Modular RedDot Adapter) Mounting Instructions

Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.


WARNING: Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.

STEP 1: Install Outerimpact Dovetail onto slide.

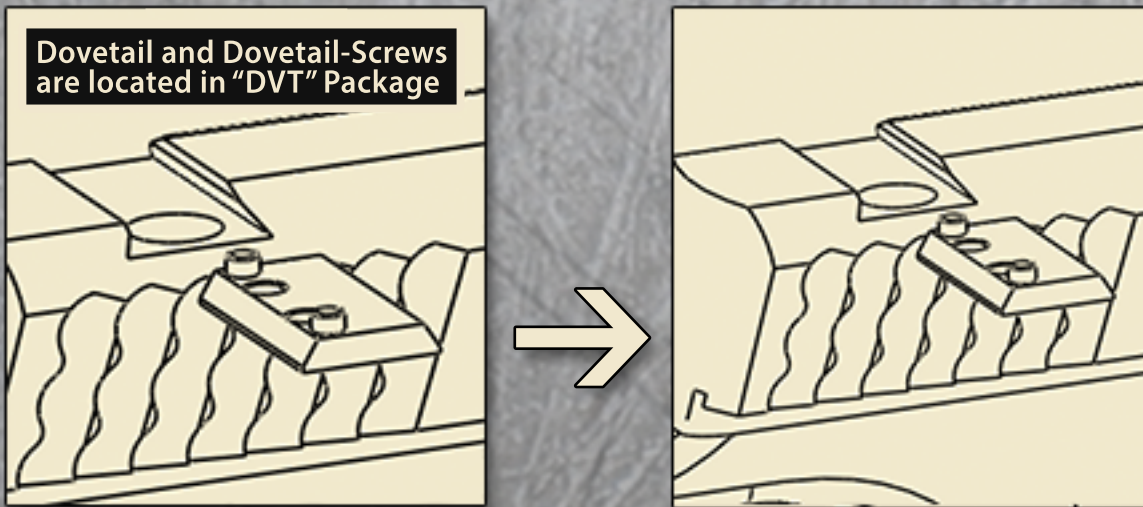

STEP 2: Test fit the Red Dot sight to Outerimpact adapter, utilizing Red Dot Adapter Chart. Note: make sure screws do not stick out beyond bottom of adapter. After test fitting remove Red Dot sight from adapter.

STEP 3: Secure sight adapter to dovetail with supplied weaver screws. Torque to 25 in/lbs

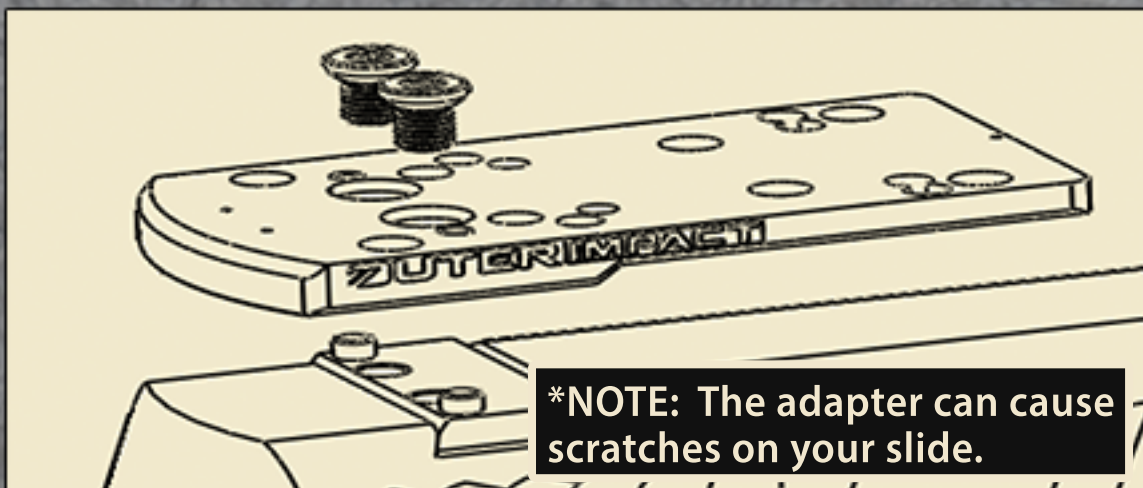

NOTE: THE ADAPTER BASE PLATE HAS AN INTENTIONAL CURVE. THIS CURVE WILL FLATTEN OUT WHEN MOUNTED TO THE FIREARM.

STEP 4: Using the Screws/Pins and mounting pattern identified in Step 3, mount the Red Dot sight to the adapter and torque to 12in/lbs

| MOUNTING PATTERNS: | SIGHT Manufacture | SIGHTS Model | SCREWS USED |
|--|-------------------|--------------------------------|----------------------------|
| The RED circles indicate locations for 2 included alignment pins | | | |
| The BLACK circles indicate locations for mounting screws --- Torque Screws to 12 IN/LBS | | | |
| | VORTEX | VIPER | M3 x 8mm |
| | BURRIS | FAST FIRE 3 | |
| | BURRIS | FAST FIRE 2 | M3 x 6mm |
| | DOCTOR | MRDS | M3 x 6mm |
| | INSIGHT | MRDS | |
| | EOTECH | MRDS | M3 X 6mm |
| | VORTEX | VENOM | |
| | TRUICON | RMR | #6 SCREWS |
| | LEUPOLD | Delta Point Delta Point Pro | SIGHT SUPPLIED SCREWS WORK |
| | VORTEX | RAZOR | M4 SCREWS |
| | SIG SAUER | ROMEO3 | |
| | CMORE | RTS & STS | |

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.